


BENZING Antenna Controller

Installation

Connection

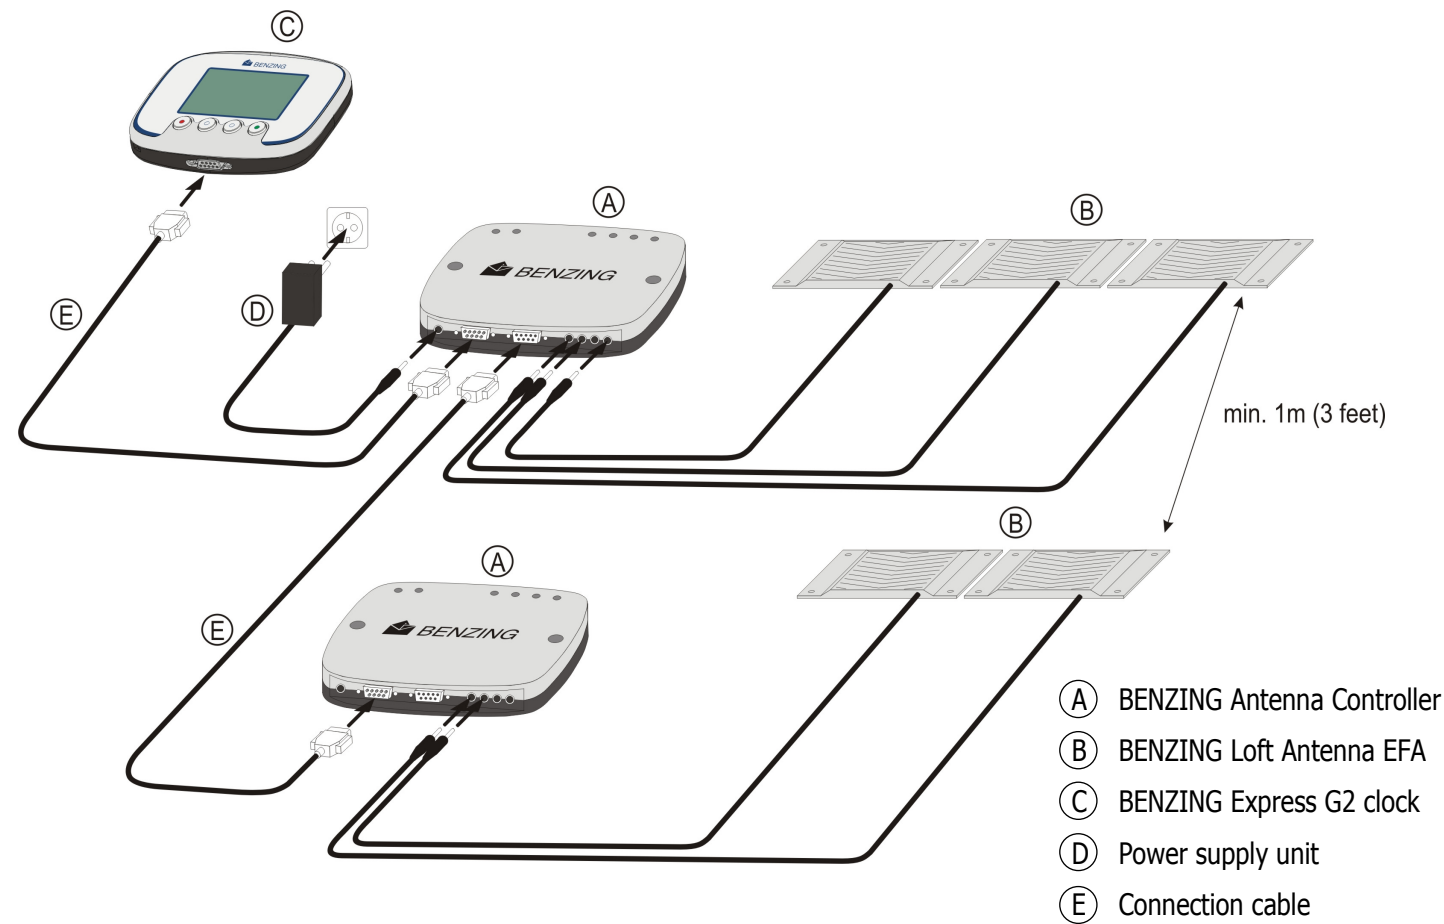


Always connect the power supply at last!
The distance between the EFA antennas of different BENZING Antenna Controllers must be min. 1m (3 feet)!


Operation

After connection to mains the BENZING Antenna Controller checks the connected EFA antennas. The connected BENZING Express G2 checks the antennas for pigeons rings and reads the ring information. The power for the BENZING Express G2 is supplied by the BENZING Antenna Controller. The status information of the BENZING Antenna Controller is shown by lights on the top of the controller.


Status Information

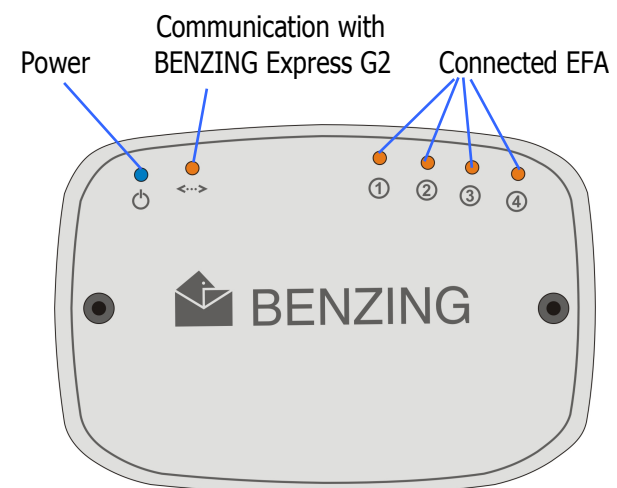

Mounting of EFA Antennas

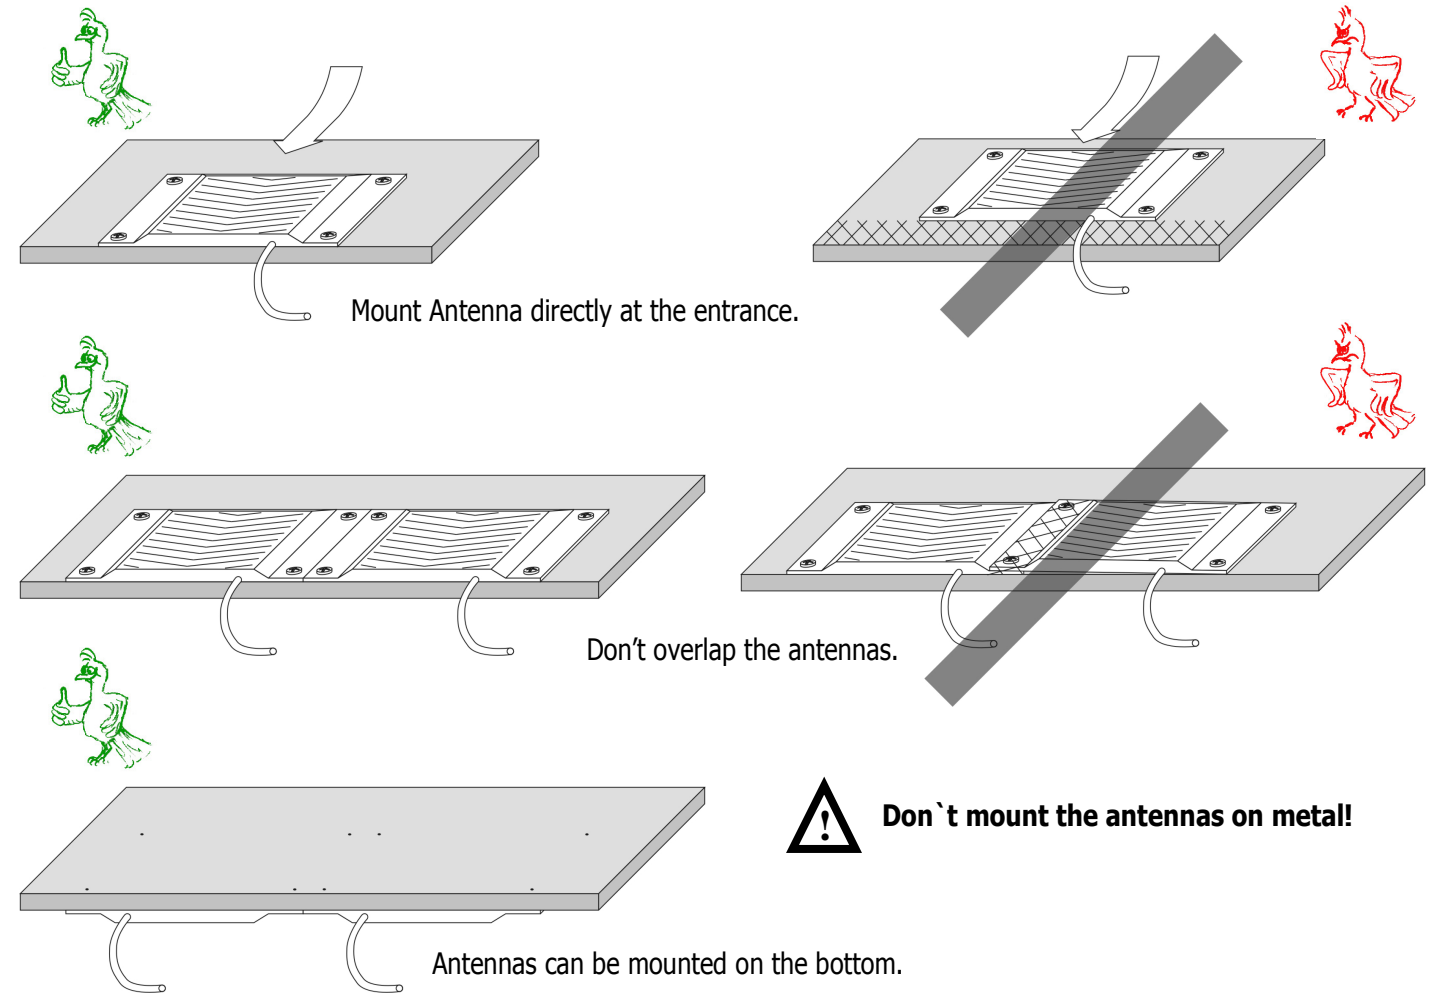

Tunnel

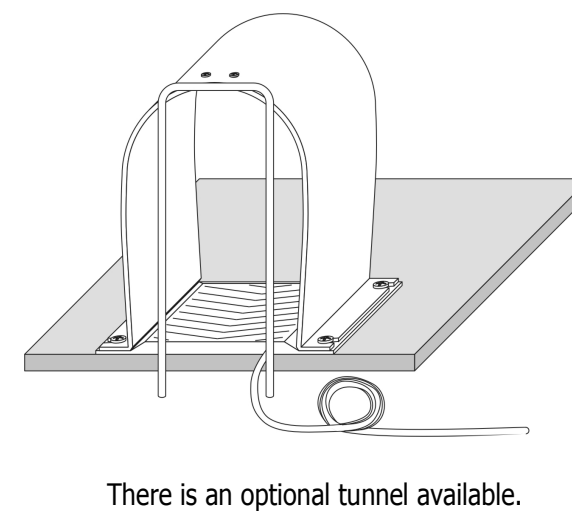

Antenna Cable

